

# Quick Start Guide 4CH/8CH POE NVR Kit

## English Version



## Applicable to POE Camera Kit Products K1 Series

### 1. Welcome

Thank you for choosing our system

This quick start guide will help you get familiar with our products in a very short time.

Before installation and operation, please read the following safety precautions and warnings carefully.

Upon receipt, check that the contents of your package comply with the list below.

### 2. Video recorder hard disk installation instructions

Advice:


Before the installation, please make sure the equipment is out of power And use the NVR special SATA interface hard disk recommended by our company.



Screw the back panel and side of the boot box, then remove the cover plate.



Align the screw holes on the hard disk with the screw holes on the chassis of the box and screw them one by one.

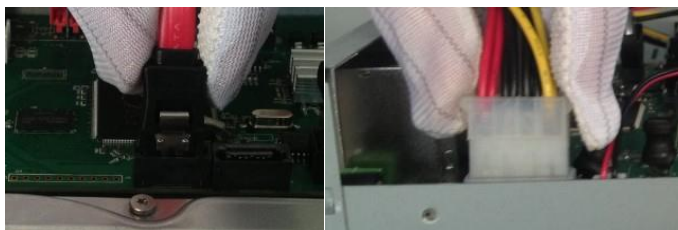

Connect the hard disk data cable and power cable to the main board.



Connect the other side of the hard disk data cable and power cable to the hard disk.

### 3. Camera installation instructions

3.1 Please use the special tool in the installation tool package to unscrew the screw at the bottom of the bracket, and then adjust the orientation of the bracket as required. (Tighten clockwise and loosen counterclockwise)



#### 3.2 Ceiling installation



#### 3.3 Mounted on the wall




#### 3.4 Connection cable

This series of products only need to plug in LAN network cable. When the indicator light is on, it will flash continuously, indicating that the camera power is normal and the video recorder is connected




## 4. Equipment connection instructions

### 4.1 Front panel

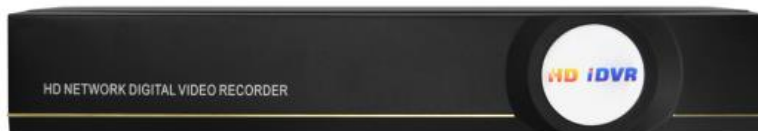

Host front button description( This series does not have this function)

### 4.2 Rear panel

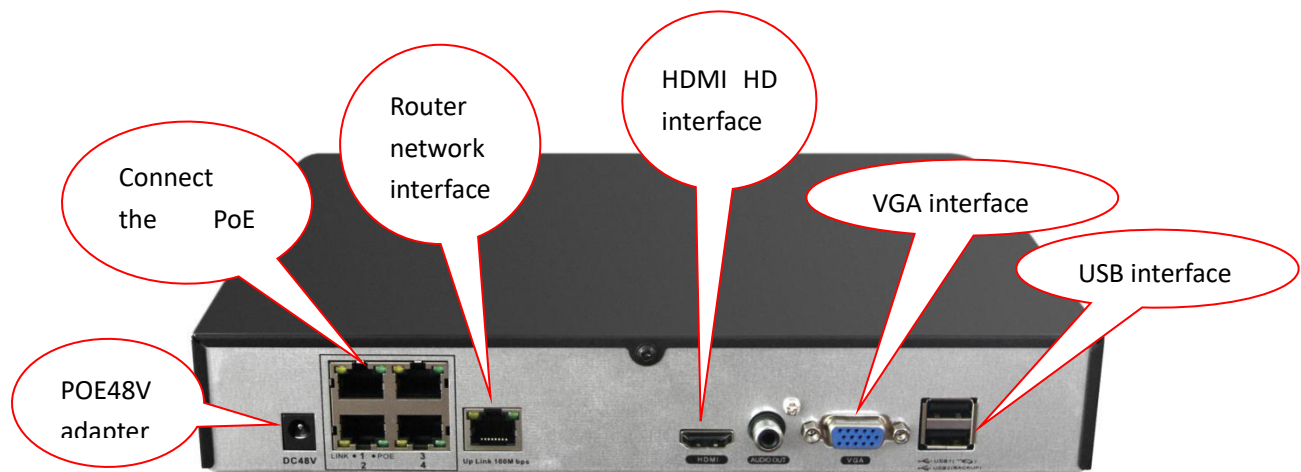

Please use the special power adapter for VCRS provided by us to ensure that all other devices are connected. This device provides two USB ports.



#### 4.3 The connection between the camera and the video recorder

One side of the wire is connected to the net port on the back of the video( four

combination ports),and the other side is connected to the net port of the tail line of the camera .



Connection diagram with the router

When the camera is properly connected to the video recorder, the indicator light is on and flickers continuously, indicating that the camera is powered normally and connected to the video recorder.

Please connect the VGA cable or HDMI HD cable to the corresponding interface of the video recorder, and connect the other side to the monitor or HDTV.



#### 4.4 Connection diagram

Please use the dedicated power adapter provided in the package for the PW interface .

The LAN (PoE)interface group is used to connect a dedicated PoE camera;

The WAN interface is used to connect routers or other network devices;

The VGA connector can be connected to a monitor or HDTV via a VGA cable;

HDMI interface can be connected to the monitor or HDTV via HDMI cable;

The USB interface can be used to connect storage devices such as a mouse or a USB flash drive.



NVR is available with 4 LAN (PoE)ports

NVR is available with 8 LAN (PoE) ports

## 5. Setup instructions

### **Before starting, please check the following points:**

For the safety of the unit, please connect the NVR first to the power adapter and then to the AC outlet.

The nominal input voltage must correspond to that indicated near the on/off button. Please check that the power cord is properly connected.

Always use a stable power source, if necessary, install an inverter (UPS).

### **Please follow the procedure below to start the unit:**

Connect the device to a monitor, then connect a mouse.

Connect the power cord

After starting the unit, the multi-channel display mode is selected by default




## 5.1 Equipment startup

The device is connected, please insert the power adapter into the hard disk video power interface, the device will start.


## 5.2 Initialization setting operation instructions.

The video recorder will automatically search the connected camera when it is first started.

Please wait patiently and set the following steps according to the prompt after finishing the scan.

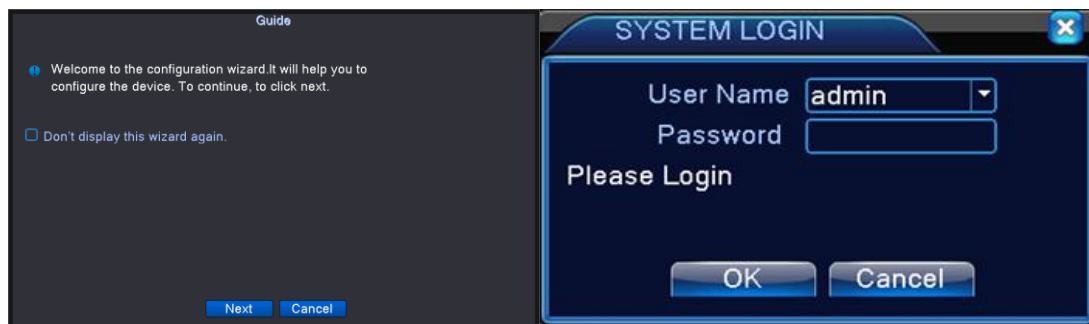


## Time setting

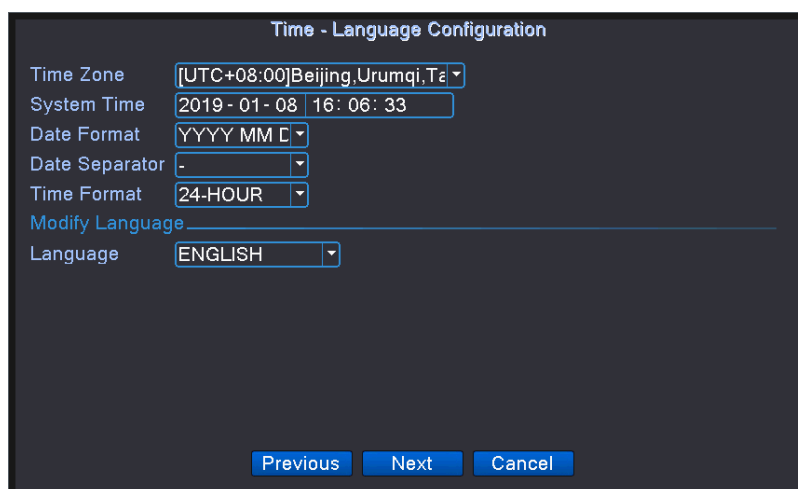


First there will be a network test



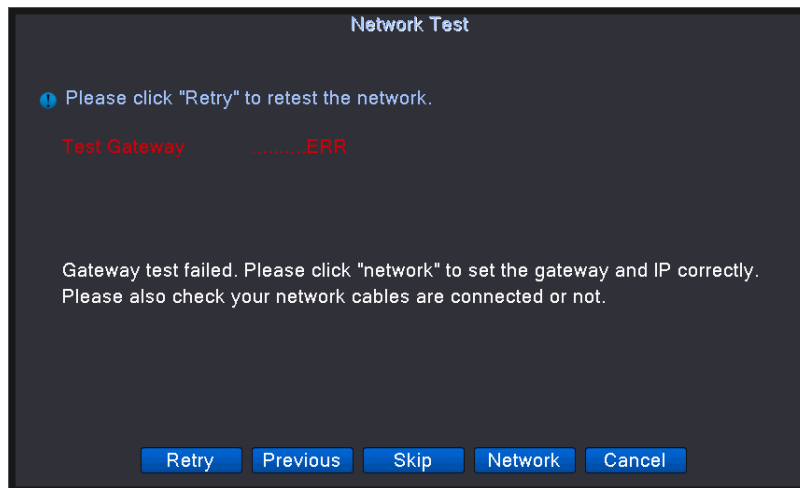

The user can click on the network settings to modify it until the network test shows OK

To set the IP address of the VCR, you can choose DHCP router management mode or manual setting mode. (Please configure the address according to the network in which you live. Mouse to change the number or click the number to appear in the digital panel)

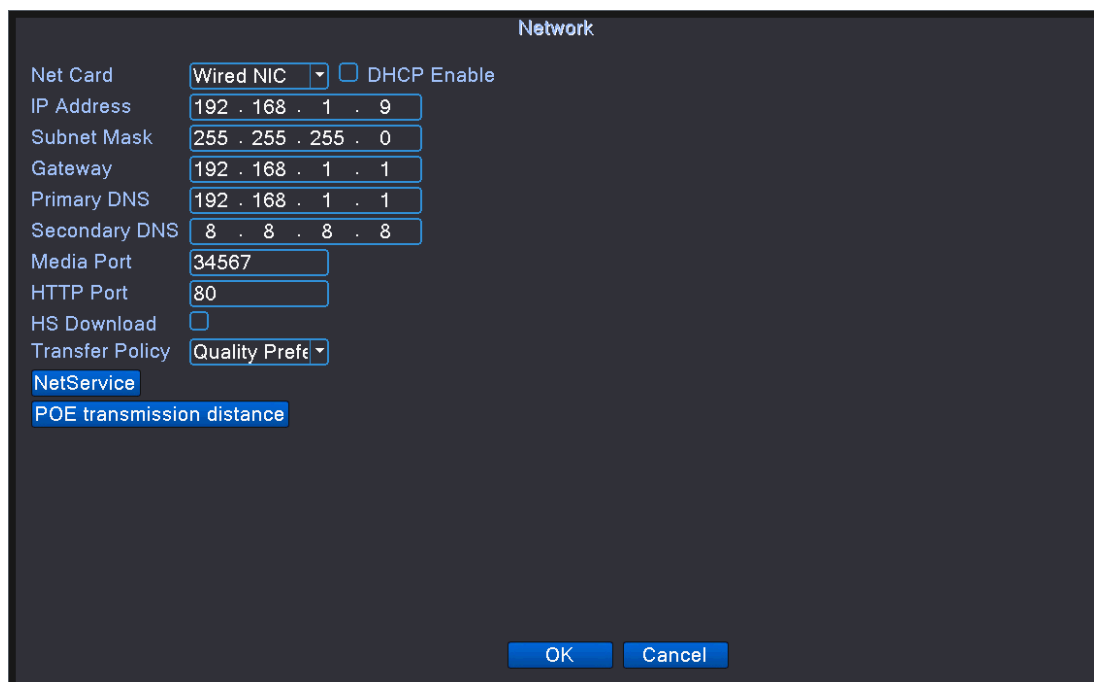


**Network**

Net Card	Wired NIC	<input checked="" type="checkbox"/> DHCP Enable
IP Address	192 . 168 . 1 . 9	
Subnet Mask	255 . 255 . 255 . 0	
Gateway	192 . 168 . 1 . 1	
Primary DNS	192 . 168 . 1 . 1	
Secondary DNS	8 . 8 . 8 . 8	
Media Port	34567	
HTTP Port	80	
HS Download	<input type="checkbox"/>	
Transfer Policy	Quality Prefe	
NetService		
POE transmission distance		


Display the serial number of the video recorder and QR CODE of the APP. ( Please use the **mobile** software, scan and add.)

**Install mobile app**

APP



SerialNo



## APP DOWNLOAD

Tips one:Go to search and download “XMEye” in GooglePlay and AppStore.



XMEye

Tips two: Scan QR code to download.



**Android**




**IOS**

#### DEVICE OPERATION

Open XMEye application.

1. Register (User registration according to the prompt to complete the new account registration.)
2. Cloud Login (Enter the user name and password and click Cloud login.)
3. Temporary access please click "Local Login.

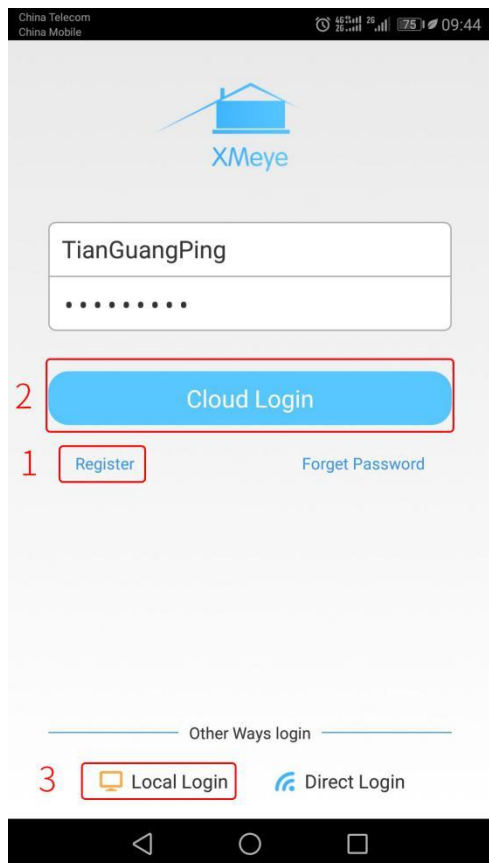

2 Click “+” at the right top corner to add device,

1.) choose “Manual Add”

2.) Enter “Device Name”


3.) Enter “Serial Number” (Or click the qr code to scan enter “Serial Number” .)

4.)Username(Default is admin)

5.)Password(Default is null)

6.)Search(If the phone and NVR are in the same LAN, Can click Search Serial Number.)




 Click "+" to add device  
watch the world together



3 Add the "Serial Number" through NVR.

1.) APP download 2.) Check that the NAT status is "Connected" . 3.) Serial Number 4.)

Obtain the "Serial Number" through the Qr code.

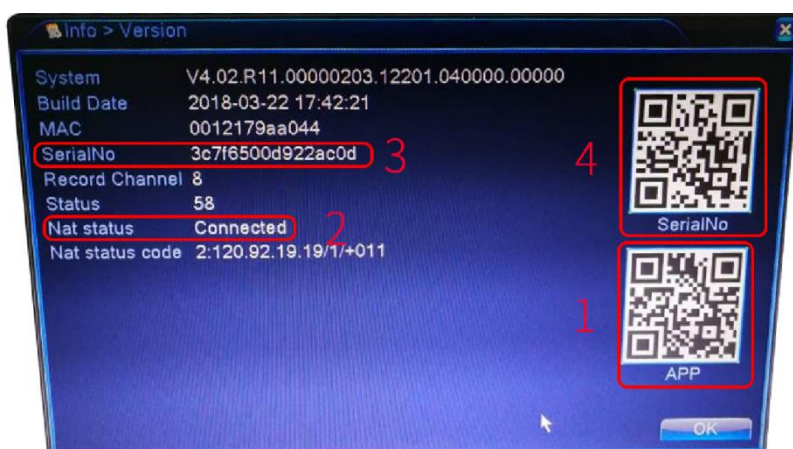


Or



Enter the serial number of the recorder (press the “Scan” button on the right QR code to scan the serial number QR code displayed on the NVR and add the device. To ensure the connection status of the recorder NAT status is successful, 4. Click OK (you can also click Search, make sure that the wireless network connection of the mobile phone is on the same router network as the NVR, and the default password of the NVR is blank and no password).

Mobile APP installation and operation is complete, select "Next" on the NVR


The device will automatically search for and add connected cameras.

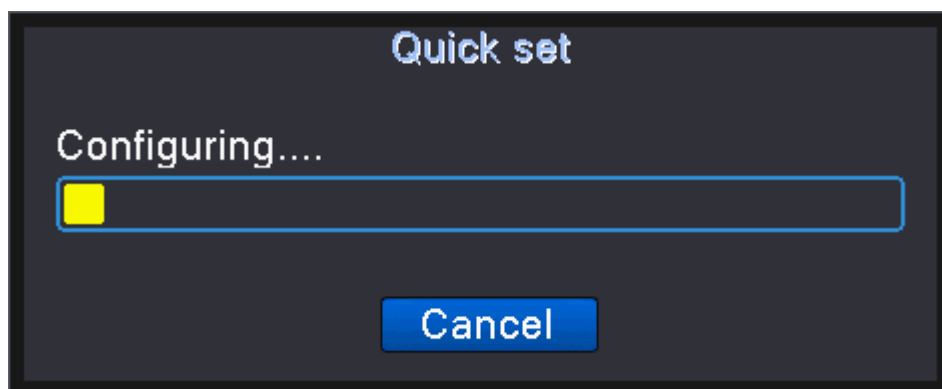

第七页

Click the SEARCH icon to search for the device.



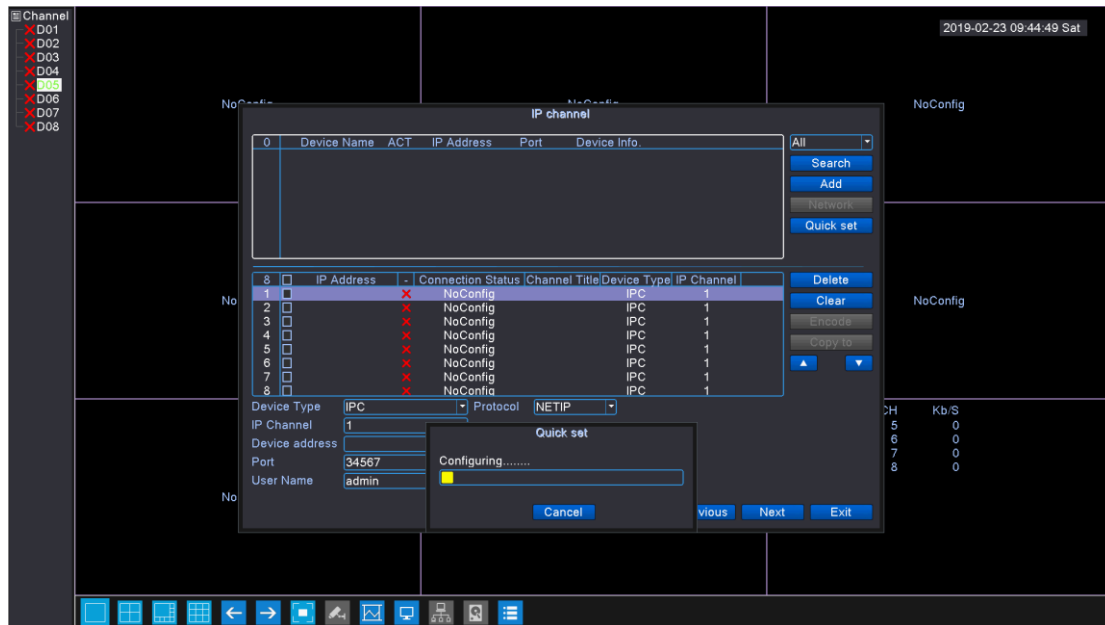

The device is added. Click OK to save the settings and exit.



## User and password setting operations

First, enter the menu and click the "User" button to enter the operation interface.



Second, select "Add User" or "Change Password" in the right column.

7.2 Add users, customers can set their own user name and password, it is recommended to set the user name and password that you can remember.

**Add User**

User Name  Reuseable ☒

Password

Confirm

Memo

GROUP

40 ☐ Authority

1	<input checked="" type="checkbox"/> Shutdown the device
2	<input checked="" type="checkbox"/> Channel Title
3	<input checked="" type="checkbox"/> Schedule
4	<input checked="" type="checkbox"/> Backup
5	<input checked="" type="checkbox"/> HDD Management
6	<input checked="" type="checkbox"/> Account
7	<input checked="" type="checkbox"/> Query System Info
8	<input checked="" type="checkbox"/> Query Log Info
9	<input checked="" type="checkbox"/> Clear Log
10	<input checked="" type="checkbox"/> System Update
11	<input checked="" type="checkbox"/> Auto Maintain
12	<input checked="" type="checkbox"/> Tour、Spot Config
13	<input checked="" type="checkbox"/> Output Adjust
14	<input checked="" type="checkbox"/> General Config
15	<input checked="" type="checkbox"/> Encode Config
16	<input checked="" type="checkbox"/> RS232

7.3 Change the password, you can choose the default two users to modify the password, it is recommended to save the password to ensure that it will not be lost.

Channel

- x D01
- x D02
- x D03
- x D04
- x D05
- x D06
- x D07
- x D08

NoConfig

NoConfig

NoConfig

**Account**

2	User Name	Group	Status
1	<input type="checkbox"/> admin	admin	GUI
2	<input type="checkbox"/> default	user	Default User

**Modify Pwd**

User Name

Old

New

Confirm

H	Kb/S
5	0
6	0
7	0
8	0



Modify Pwd

User Name

Old

New

Confirm

OK Cancel

If the password is wrong for 3 consecutive times the device will give an alarm .5 consecutive errors, account lock(after system restart or half an hour, the locked account will be unlocked automatically).

For security, change the username and password in user management immediately after the user logs in for the first time.

#### 8. Recording storage settings

If you do not operate on the storage settings, you can select the system default recording parameters, no need to set. If you want to set it yourself, do the following.

Set the recording parameters of the monitoring channel. When first started, the system is set to 24 hours of continuous recording. Available in [Main Menu] > [Recording Function] >

[Recording Settings] Make the corresponding settings

**Record Conf.**

Channel  Redundancy ☐

Length  min

Mode ☒ Schedule ☐ Manual ☐ Stop

Week  Regular Detect Alarm

Period 1	<input type="text" value="00:00 - 24:00"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Period 2	<input type="text" value="00:00 - 00:00"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 3	<input type="text" value="00:00 - 00:00"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 4	<input type="text" value="00:00 - 00:00"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

[Channel] Select the corresponding channel number for channel setting, and all channels can be selected to be uniform.

[Length] Set the length of each video file, the default is 60 minutes;

[Recording mode] Set the recording status, there are three states: configuration, manual and off;

Configuration: Record according to the set (normal, detection and alarm) recording type and recording time period;

Manual: Regardless of the current state of the channel, after selecting the "Manual" button, the corresponding channels are all recorded normally;


Off: Regardless of the current state of the channel, after selecting the "Close" button, the corresponding channel stops recording.

[Time Period] Set the time period for normal recording, and the recording will start within the set time range;

## 9. Video query operation

Play the video file on the hard disk, you can use the shortcut menu, or you can enter the video playback interface in [Main Menu] - [Video Function] - [Video Playback].

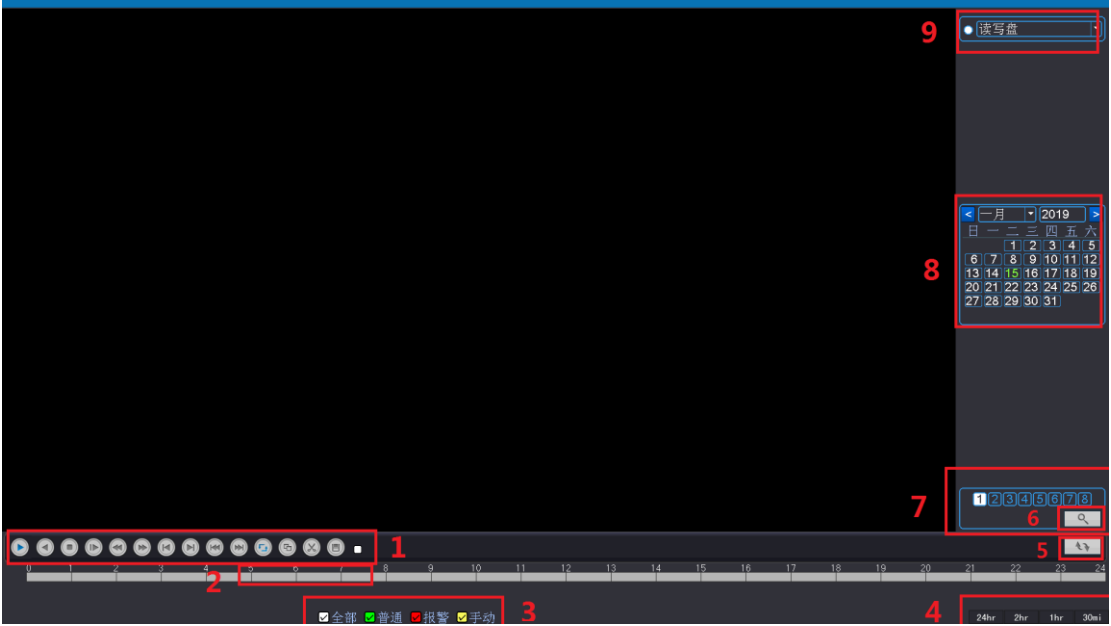


Note: The device should be played back normally. The hard disk that stores the video file must be set to read/write disk or read-only disk.




1	Playback control	2	time display	3	Video type	4	Time schedule options
5	search by time/switch mode	6	File search	7	Channel selection	8	Date selection
9	Storage device selection						

The playback control keys are detailed in the table below.


Button	Features	Button	Features
	Play/pause button		fall back
	Slow playback		Fast playback
	Play the previous frame		Play next frame
	Play the previous file		Play the next file
	cycl playback		full screen

	shut down		Start/end clip
	Clip recording backup		


## 8. Mobile APP remote playback

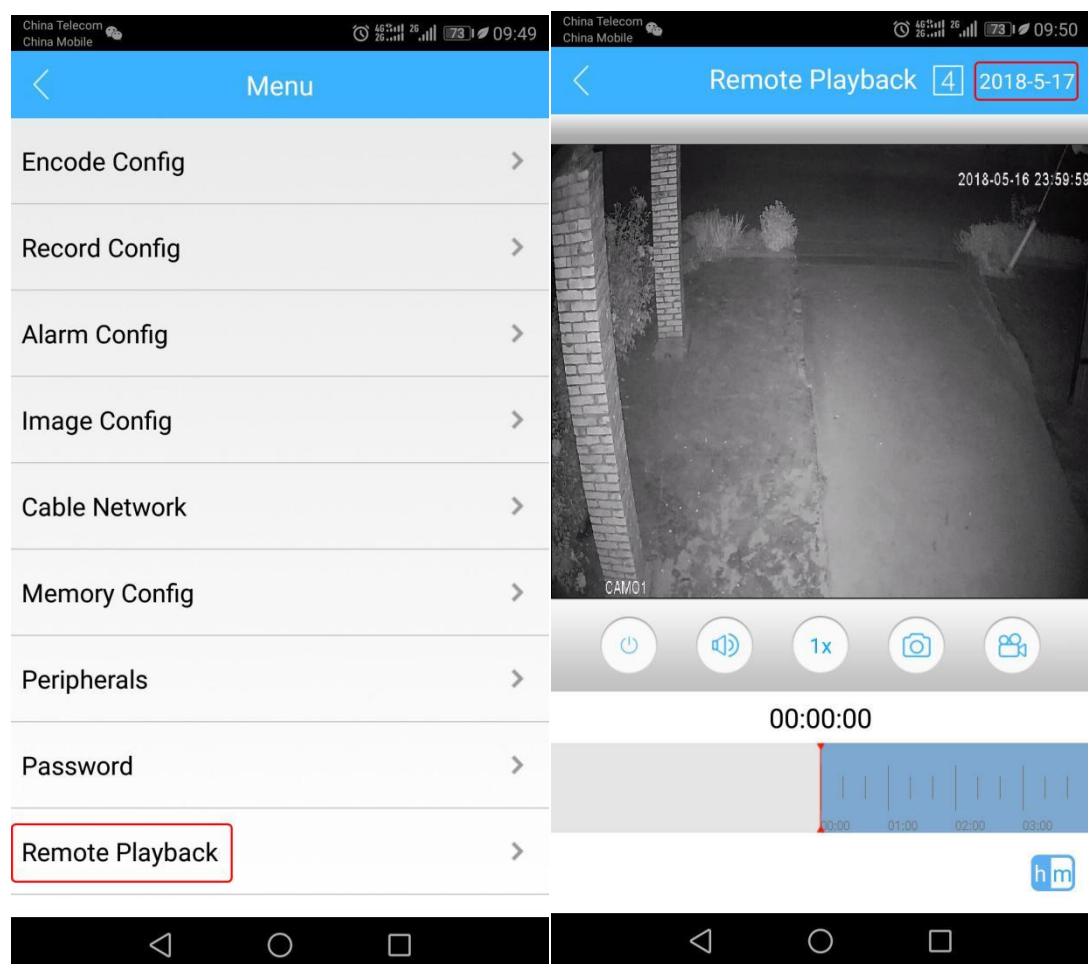

### 3.6 MAIN MENU

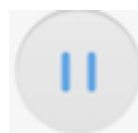

: Stop, when live preview is delayed, click here to re-connect again.

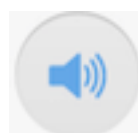


: It's speaker of two-way audio, when you speak at camera's microphone, then you will hear at your phone if enable it.






: Configuration for encode,video, alarm, image,peripherals, remote


playback,change password, download video and about device.

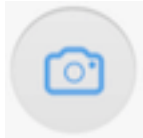

:Snapshot

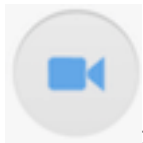

:Local record in mobile phone

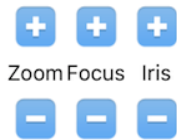

: Pan/tilt movement and image color control



:Press here to speak and hear from the camera



:Preview resolution – HD and SD



:Refresh the preview video



:Playback

